



The SEBO *air belt* Canister

How to attach your Power Head to the telescopic tube:



STEP 1. First, identify which power head you have purchased - the ET-C or the ET-H Power Head (see photos below).

THE ET-C POWER HEAD

STEP 2. Find the connection tab (A) at the base of the telescopic tube (B).

ET-C Power Head: move the connection tab (A) IN toward the tube (C). See enlarged detail below. It will only move approximately 1/8-inch. Proceed to step 3.

STEP 3. Insert the base of the telescopic tube (E) into the power head swivel neck (F). Make sure that the connection tab (A) is properly aligned with the connection plug (G) in the swivel neck. Damage to the connection may occur if the tab and the plug are not properly aligned.

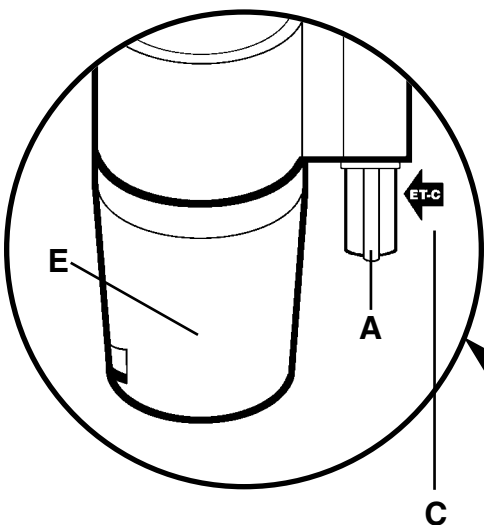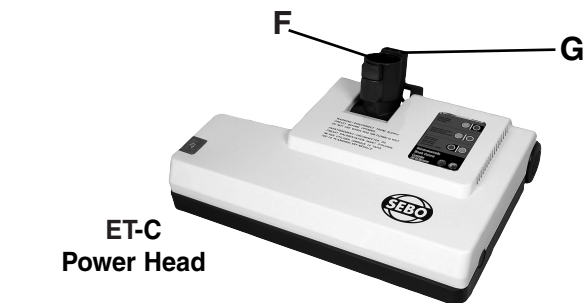



Move tab approximately 1/8-inch
toward tube for ET-C head.

THE ET-H POWER HEAD

STEP 2. Find the connection tab (A) at the base of the telescopic tube (B).

ET-H Power Head: move the connection tab (A) OUT away from the tube (D). See enlarged detail below. It will only move approximately 1/8-inch. NOTE: the tab must not be forced beyond the "flush" position of the collar. Proceed to step 3.

STEP 3. Insert the base of the telescopic tube (E) into the power head swivel neck (F). Make sure that the connection tab (A) is properly aligned with the connection plug (G) in the swivel neck. Damage to the connection may occur if the tab and the plug are not properly aligned.

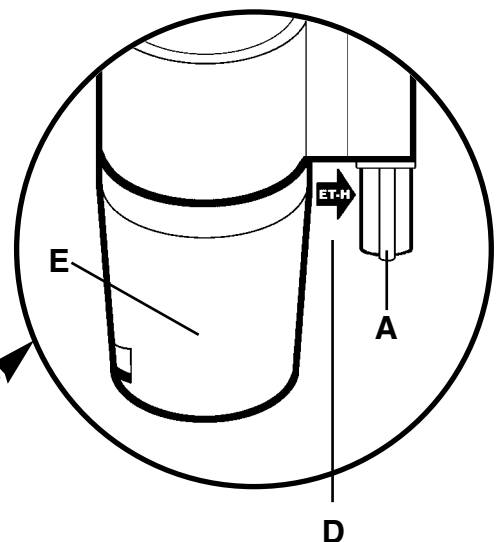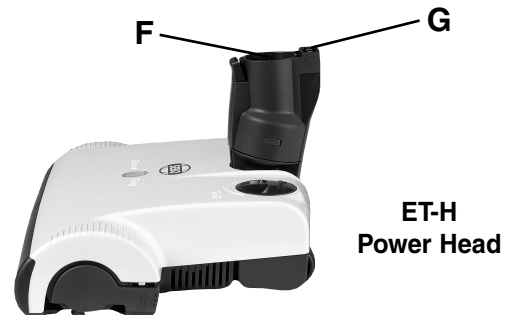

Move tab approximately 1/8-inch
away from tube for ET-H head.